



**KAMERA  
ZEWNĘTRZNA SMART  
SC930**

---

Instrukcja obsługi  
i warunki gwarancji

**SMART SC930  
OUTDOOR CAMERA**

Operating Manual  
& Warranty Terms





## WARUNKI BEZPIECZEŃSTWA I ZAGROŻENIA

1. Nie należy uruchamiać urządzenia jeżeli jest uszkodzone, urządzenie musi zostać naprawione przez serwis lub osobę do tego uprawnioną.
2. Ze względów bezpieczeństwa, do wszelkich napraw urządzenia uprawniony jest jedynie producent, serwis autoryzowany przez producenta lub osoba o odpowiednich kwalifikacjach.
3. Nie należy próbować naprawiać i ingerować we wnętrze urządzenia.
4. Niniejszy sprzęt może być użytkowany przez dzieci w wieku co najmniej 8 lat i przez osoby o obniżonych możliwościach fizycznych, umysłowych i osoby o braku doświadczenia i znajomości sprzętu, jeżeli zapewniony zostanie nadzór lub instruktaż odnośnie do użytkowania sprzętu w bezpieczny sposób i zrozumiałe związane z tym zagrożenia. Dzieci nie powinny bawić się sprzętem. Nie powinno być wykonywane czyszczenie i konserwacja sprzętu przez dzieci bez nadzoru.

5. Produkt posiada klasę ochronności IP65, jest pyłoszczelny oraz odporny na wodę.
6. Nie należy zanurzać urządzenia w wodzie ani innych płynach.
7. Urządzenie nie jest zaprojektowane w celu ochrony własności. Do takiego rozwiązania zaleca się stosowanie profesjonalnego systemu alarmowego.
8. Należy się upewnić, że lokalne przepisy nie zabraniają rejestrowania, przechowywania i edytowania wideo bez zgody osób nagrywanych.
9. Nie należy używać zasilacza jeżeli jego przewód lub obudowa są uszkodzone.

## WPROWADZENIE

Dziękujemy za zaufanie, jakim nas Państwo obdarzyli, dokonując zakupu urządzenia marki **Setti+**.

Jesteśmy przekonani, że to bardzo dobrej jakości urządzenie zapewni Państwu dużo radości i satysfakcji z jego użytkowania.


**NALEŻY DOKŁADNIE PRZECZYTAĆ INSTRUKCJĘ OBSŁUGI I JEJ PRZESTRZEGAĆ!**

To urządzenie jest przeznaczone do użytku domowego lub podobnego, nie dotyczącego celów komercyjnych. Producent nie ponosi odpowiedzialności za szkody powstałe w wyniku użytkowania niewłaściwego lub niezgodnego z przeznaczeniem.

# DANE TECHNICZNE

<b>Model</b>	<b>SC930</b>	
Zasilanie	12.0V === 1.0A	
Zakres regulacji kąta monitorowania	200° w poziomie	
Klasa ochronności	IP65	
Rozdzielczość zapisu wideo	2304 x 1296	
Zakres temperatury pracy	-10 do +55°C	
Wejście Ethernet	RJ45	
Wyposażenie	Kamera ze złączami, zasilacz, elementy montażowe	
Zasięg wykrywania ruchu	15 m	
Wymagania systemowe	Android, IOS	
Obsługiwane karty pamięci	Micro SD, do 128 GB	
Częstotliwość transmisji	2.4 GHz	
Zakres częstotliwości	2412 – 2472 MHz	
Moc maksymalnej transmisji	<10 dBm	
<b>Zasilacz</b>		
Model	SC930	
Napięcie wejściowe	100-240V~	
Wejściowe natężenie prądu	0.5A	
Wejściowa częstotliwość prądu przemiennego	50/60Hz	
Napięcie prąd i moc wyjściowa	12V === 1A, 12W	
Średnia sprawność podczas pracy	83.02%	
Sprawność przy niskim obciążeniu (10%)	80.59%	
Zużycie energii w stanie bez obciążenia	0.065	

# OPIS URZĄDZENIA

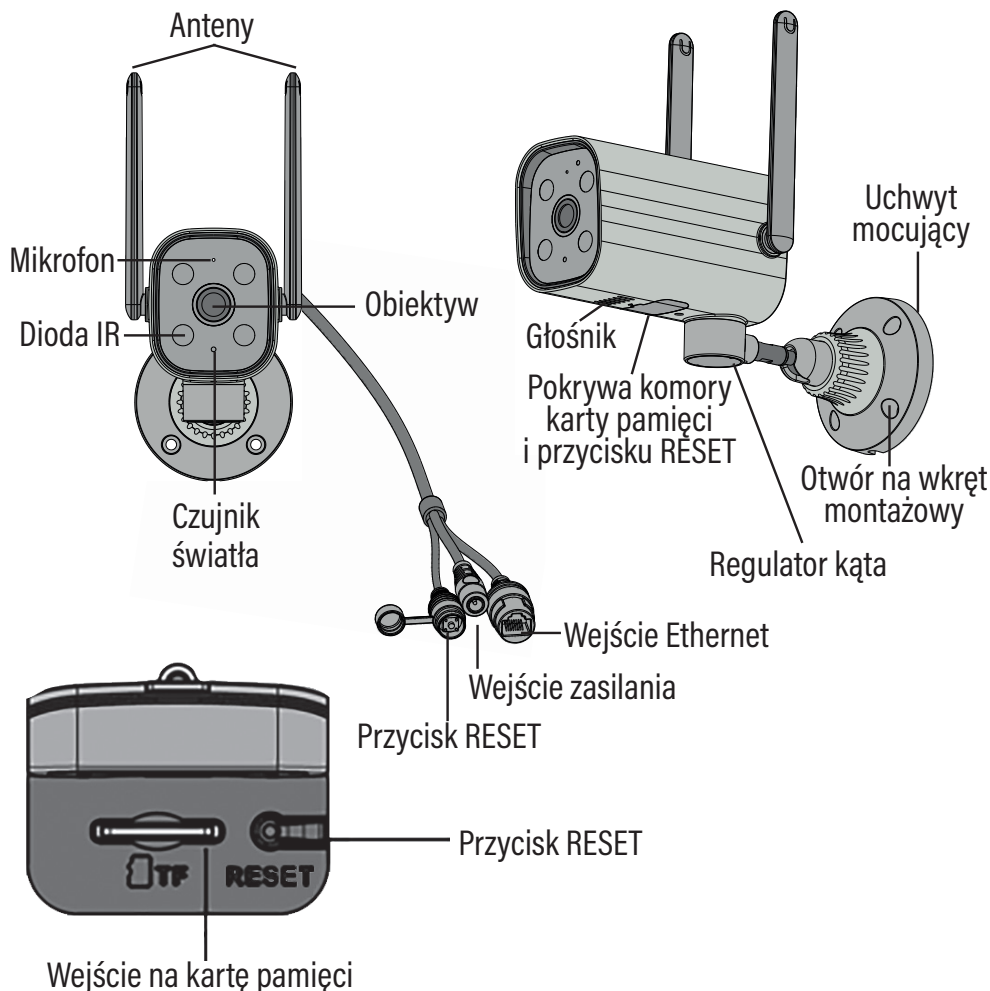


# MONTAŻ NA ŚCIANIE

Uchwyt z kamerą można zamocować na ścianie betonowej za pomocą kołków montażowych.

1. Przyłóż uchwyt do ściany i zaznacz miejsca otworów do wywiercenia. W tym celu możesz użyć szablonu pomocniczego z wyposażenia.
2. Wywierć otwory zgodnie ze średnicą kołka montażowego, zamocuj kołki w otworach.
3. Przyłóż uchwyt montażowy do ściany, włóż wkręty w otwory uchwytu i wkręć w kołki, blokując uchwyt na ścianie.


**UWAGA! JEŻELI UCHWYT NIE JEST STABILNIE ZAMOCOWANY NALEŻY GO ZDJĄĆ I DOKONAĆ PONOWNEJ, ZGODNEJ Z INSTRUKCJĄ INSTALACJI.**

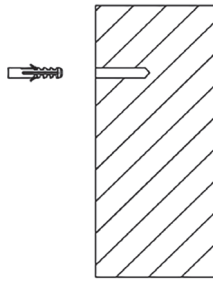

**UWAGA! ZALECANY JEST MONTAŻ KAMERY POD ZADASZENIEM I UNIKANIE MOCNO NASŁONECZNIONYCH MIEJSC.**

## INSTALACJA PRZEWODU ETHERNET Z IZOLACJĄ

1. Nałóż gumową uszczelkę na wtyczkę Ethernet.



2. Poprowadź przewód Ethernet przez elementy w poniższej kolejności:



3. Skręć i połącz ze sobą elementy:



4. Włóż wtyczkę A do gniazda wejściowego Ethernet kamery, obróć nakrętkę mocującą, aby przymocować ją do wodoodpornej obudowy.


5. W celu podłączenia kamery do lokalnej sieci internetowej, najpierw skonfiguruj kamerę zgodnie z sekcją „Instalacja i obsługa aplikacji”, następnie podłącz wtyczkę przewodu LAN do wejścia Ethernet w kamerze.

**UWAGA! WYMAGANE JEST POŁĄCZENIE SIECIOWE W RAMACH TEGO SAMEGO ROUTERA.**

## ZASILANIE ZA POMOCĄ PRZEWODU ETHERNET (POE)

W celu podłączenia zasilania kamery za pomocą przewodu sieciowego, użyj załączonych na wyposażeniu adapterów (PoE).

1. Podłącz adapter wyjściowy do wejścia Ethernet oraz wejścia zasilania w kamerze.
2. Do adaptera wejściowego podłącz wtyczkę zasilacza oraz złącze sieci LAN.
3. Oba adaptory połącz ze sobą przewodem Ethernet ze złączami RJ45.

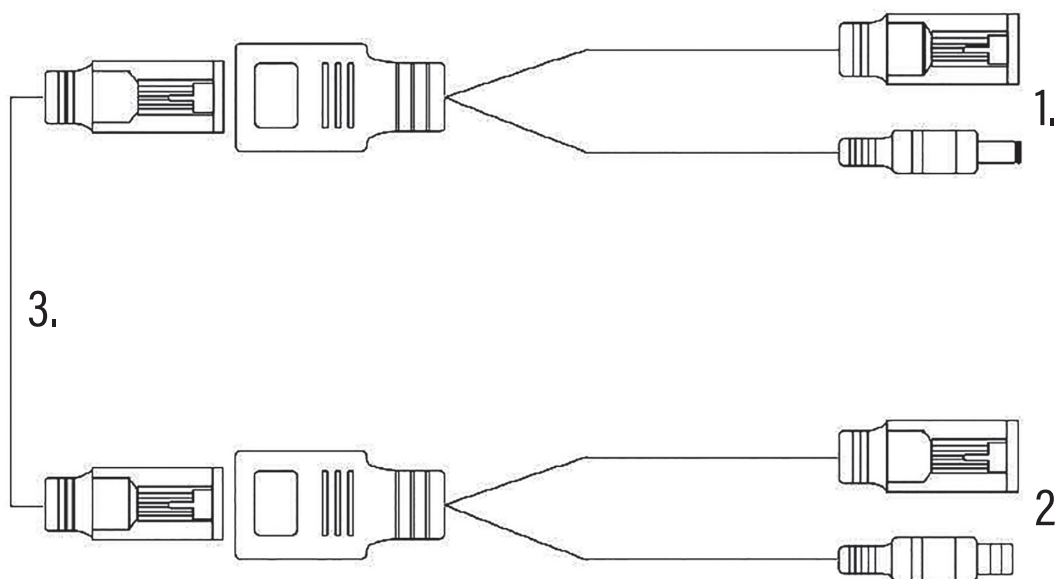



## INSTALACJA KARTY PAMIĘCI

W celu instalacji karty pamięci microSD (max. 128 GB):

1. Delikatnie podważ pokrywę komory karty pamięci i ją otwórz.
2. Wsuń kartę w wejście zgodnie z oznaczeniem, dociśnij i zablokuj.

## INSTALACJA I OBSŁUGA APLIKACJI

1. Pobierz aplikację Setti+ ze strony, skanując QR kod:



w aplikacji Google Play  
wyszukaj Setti+



w aplikacji App Store  
wyszukaj Setti+.

2. Otwórz zainstalowaną aplikację.
3. Jako nowy użytkownik załóż nowe konto. W przypadku posiadania konta zaloguj się, korzystając z własnych danych dostępowych.
4. Uruchom urządzenie, podłączając zasilacz do gniazda elektrycznego, a wtyczkę przewodu do wejścia zasilania w kamerze. Kamera wykona ruch testowy i wyda sygnały dźwiękowe.
5. Otwórz pokrywę komory, naciśnij i przytrzymaj przycisk RESET przez 5 sekund. Kamera wyda sygnał dźwiękowy i przejdzie w tryb konfiguracji.
6. W prawym górnym rogu aplikacji naciśnij przycisk „+” i wybierz odpowiednie urządzenie: Bezpieczeństwo, Kamera SC930.
7. Upewnij się, że kamera podłączona jest do zasilania i wydaje sygnały dźwiękowe, informując o trybie konfiguracji.

8. Wybierz sieć Wi-Fi (2.4GHz), wprowadź hasło i potwierdź przyciskiem „Dalej”.
9. Na ekranie telefonu wyświetli się QR kod. Skieruj obiektyw kamery w stronę ekranu telefonu aby zeskanować kod. Po usłyszeniu sygnału dźwiękowego potwierdź przyciskiem „Słyszałem dźwięk”.
10. Po pomyślnym połączeniu urządzenia możesz w pełni cieszyć się jego zdalną obsługą.
11. W celu podłączenia kamery do lokalnej sieci internetowej, podłącz wtyczkę przewodu LAN do wejścia Ethernet w kamerze.

**UWAGA! WYMAGANE JEST POŁĄCZENIE SIECIOWE W RAMACH TEGO SAMEGO ROUTERA, Z KTÓRYM WYKONANA ZOSTAŁA KONFIGURACJA Z APLIKACJĄ STERUJĄCĄ.**

Szczegółowa instrukcja obsługi aplikacji sterującej jest dostępna na stronie internetowej:

<https://setti.pl/wsparcie/aplikacja>

lub po zeskanowaniu kodu QR:



## CZYSZCZENIE

Urządzenie należy regularnie przeglądać i czyścić.

1. Jeżeli urządzenie pracuje wśród wysokiej roślinności należy je oczyszczać z ewentualnych pyłów i zanieczyszczeń.
2. Do czyszczenia należy używać delikatnie zwilżonej ściereczki.

## UWAGA! DO CZYSZCZENIA NIE NALEŻY UŻYWAĆ ŚRODKÓW CHEMICZNYCH ANI MATERIAŁÓW ŚCIERNYCH.

### PRZECHOWYWANIE

1. Zasilacz należy odłączyć z gniazda zasilania, jeżeli urządzenie nie będzie używane.
2. Urządzenie należy przechowywać w suchym, bezpiecznym miejscu z dala od dzieci.

### ROZWIĄZYWANIE PROBLEMÓW

PROBLEM	MOŻLIWA PRZYCZYNA	ROZWIĄZANIE
Uruchomił się sygnał dźwiękowy.	Kamera nie została prawidłowo skonfigurowana z siecią lub została rozłączona.	Skonfiguruj stację z siecią domową zgodnie z sekcją „Instalacja i obsługa aplikacji”.
Brak możliwości konfiguracji kamery z siecią Wi-Fi.	Router pracuje w częstotliwości 5GHz.	Zmień częstotliwość pracy routera z 5GHz na 2.4GHz. Nazwy sieci 2.4GHz i 5GHz powinny być różne.
	Wystąpił problem z połączeniem Wi-Fi.	Sprawdź, czy sygnał Wi-Fi routera działa prawidłowo.
Kamera nie reaguje na zmiany w aplikacji.	Wystąpił problem z połączeniem Wi-Fi.	Sprawdź, czy sygnał Wi-Fi routera działa prawidłowo.
	Kamera znajduje się za daleko od źródła sygnału Wi-Fi.	Wzmocnij sygnał Wi-Fi routera lub zmniejsz dystans pomiędzy kamerą a routerem.
	Konfiguracja routera została zmieniona.	Skonfiguruj kamerę z siecią domową na nowo, zgodnie z sekcją „Instalacja i obsługa aplikacji”.

## DEKLARACJA

ART-DOM Sp. z o.o. niniejszym oświadcza, że kamera SC930 jest zgodna z odnośnymi wymaganiami unijnego prawodawstwa harmonizacyjnego: dyrektywą 2014/53/UE i innym unijnym prawodawstwem harmonizacyjnym. Pełny tekst deklaracji zgodności UE jest dostępny pod następującym adresem: [www.artdom.net.pl/deklaracja/SC930/](http://www.artdom.net.pl/deklaracja/SC930/)

## EKOLOGICZNA I PRZYJAZNA DLA ŚRODOWISKA UTYLIZACJA

To urządzenie jest oznaczone, zgodnie z Dyrektywą Parlamentu Europejskiego i Rady 2012/19/UE z dnia 4 lipca 2012 r. w sprawie zużytego sprzętu elektrycznego i elektronicznego (WEEE) symbolem przekreślonego kontenera na odpady:



Nie należy wyrzucać urządzeń oznaczonych tym symbolem, razem z odpadami domowymi.

Urządzenie należy zwrócić do lokalnego punktu przetwarzania i utylizacji odpadów lub skontaktować się z władzami miejskimi.

### **MOŻESZ POMÓC CHRONIĆ ŚRODOWISKO!**

Właściwe postępowanie ze zużytym sprzętem elektrycznym i elektronicznym przyczynia się do uniknięcia szkodliwych dla zdrowia ludzi i środowiska naturalnego konsekwencji, wynikających z obecności składników niebezpiecznych oraz niewłaściwego składowania i przetwarzania takiego sprzętu.

## WARUNKI GWARANCJI DOTYCZĄCE KAMERY ZEWNĘTRZNEJ

1. ART-DOM Sp. z o.o. z siedzibą w Łodzi (92-402) przy ul. Zakładowej 90/92 Numer Krajowego Rejestru Sądowego

0000354059 (Gwarant) gwarantuje, że zakupione urządzenie jest wolne od wad fizycznych. Gwarancja obejmuje tylko wady wynikające z przyczyn tkwiących w rzeczy sprzedanej (wady fabryczne).

2. Ujawniona wada zostanie usunięta na koszt Gwaranta w ciągu 14 dni od daty zgłoszenia uszkodzenia do serwisu autoryzowanego lub punktu sprzedaży.
3. W wyjątkowych przypadkach, np. konieczności sprowadzenia części zamiennych od producenta, termin naprawy może zostać wydłużony do 30 dni.
4. Okres gwarancji dla użytkownika wynosi 24 miesiące od daty wydania towaru.
5. Towar przeznaczony jest do używania wyłącznie w warunkach indywidualnego gospodarstwa domowego.
6. Gwarancja nie obejmuje:
  - a. uszkodzeń powstałych na skutek używania urządzenia niezgodnie z instrukcją obsługi,
  - b. uszkodzeń mechanicznych, chemicznych lub termicznych,
  - c. napraw i modyfikacji dokonanych przez firmy lub osoby nieposiadające autoryzacji producenta,
  - d. części z natury łatwo zużywalnych lub materiałów eksploatacyjnych takich jak: baterie, żarówki, bezpieczniki, filtry, pokrętła, półki, akcesoria,
  - e. instalacji, konserwacji, przeglądów, czyszczenia, odblokowania, usunięcia zanieczyszczeń oraz instruktażu.
7. O sposobie usunięcia wady decyduje Gwarant. Usunięcie potwierdzonej wady urządzenia nastąpi poprzez wykonanie naprawy gwarancyjnej lub wymianę urządzenia. Gwarant może dokonać naprawy, gdy kupujący żąda wymiany lub Gwarant może dokonać wymiany, gdy kupujący żąda naprawy, jeżeli

doprowadzenie do zgodności towaru (urządzenia) zgodnie z udzieloną gwarancją w sposób wybrany przez kupującego jest niemożliwe albo wymagałoby nadmiernych kosztów dla Gwaranta. W szczególnie uzasadnionych wypadkach, jeżeli naprawa i wymiana są niemożliwe lub wymagałyby nadmiernych kosztów dla Gwaranta może on odmówić doprowadzenia towaru do zgodności z udzieloną gwarancją i zaproponować inny sposób załatwienia reklamacji z gwarancji.

8. Wymiany towaru dokonuje punkt sprzedaży, w którym towar został zakupiony (wymiana lub zwrot gotówki) lub autoryzowany punkt serwisowy, jeżeli dysponuje taką możliwością (wymiana). Zwracane urządzenie musi być kompletne, bez uszkodzeń mechanicznych. Niespełnienie tych warunków może spowodować nieuznanie gwarancji.
9. W przypadku braku zgodności towaru z umową sprzedaży, kupującemu z mocy prawa przysługują środki ochrony prawnej ze strony i na koszt sprzedawcy, a gwarancja nie ma wpływu na te środki ochrony prawnej.
10. Niniejsza gwarancja obowiązuje na terytorium Polski.
11. Warunkiem dokonania naprawy lub wymiany urządzenia w ramach gwarancji jest przedstawienie dowodu zakupu oraz użytkowanie towaru zgodnie z informacjami zawartymi w instrukcji obsługi.

## **UWAGA!**

Uszkodzenie lub usunięcie tabliczki znamionowej z urządzenia może spowodować nieuznanie gwarancji.

Cały czas udoskonalamy nasze produkty, dlatego mogą się one nieznacznie różnić od zdjęć przedstawionych na opakowaniu oraz w instrukcji obsługi. Przed przystąpieniem do użytkowania urządzenia przeczytaj instrukcję obsługi.

**ART-DOM Sp. z o.o., ul. Zakładowa 90/92, 92-402 Łódź. Numer Krajowego Rejestru Sądowego 0000354059.**



v. 2



## SAFETY AND HAZARD CONDITIONS

1. Do not start the device if it is damaged, if it is so the device must be repaired by the service or a person authorized to do so.
2. Due to safety concerns, only the manufacturer, a service authorized by the manufacturer or a person with appropriate qualifications can perform any repairs of the device.
3. Do not attempt to repair or interfere with the inside of the device.
4. This product may only be operated by children 8 or more years old, mentally and/or physically deficient persons and persons without knowledge of or experience in operation of this appliance type if supervised or instructed in safe operation, with clear understanding of all related risks. Children should not play with the device. Unsupervised children should not carry out maintenance and cleaning of the device.
5. The product has IP65 protection rating, i.e. it is dustproof and water resistant.



6. Do not immerse the device in water nor in other liquids.
7. The device is not designed to protect property. For this purpose one should seek a professional alarm system.
8. Ensure that local laws do not prohibit recording, storing, and editing video without the consent of the people being recorded.
9. Do not use the power adapter if its cable or housing is damaged.

## INTRODUCTION

Thank you for the trust you have placed in us when you purchased your **Setti+** device.

We are convinced that this high quality device will provide you with a lot of joy and satisfaction during its use


**PLEASE CAREFULLY READ AND FOLLOW THE OPERATING MANUAL!**

This device is intended for domestic or similar, non-commercial use. The manufacturer will not be held liable for damages resulting from improper or non-compliant use.

# TECHNICAL DATA

<b>Model</b>	<b>SC930</b>	
Power supply	12.0V === 1.0A	
Monitoring angle adjustment range	200° Horizontal	
Protection rating	IP65	
Video recording resolution	2304 x 1296	
Operating temperature range	-10 do +55°C	
Ethernet connector	RJ45	
Accessories	Camera with connectors, power adapter, installation elements	
Motion detection range	15 m	
System requirements	Android, IOS	
Supported memory cards	Micro SD, up to 128 GB	
Frequency of transmission	2.4 GHz	
Frequency range	2412 - 2472 MHz	
Maximum transmission power	<10 dBm	
<b>Power supply unit</b>		
Model	SC930	
Input voltage	100-240V~	
Input current	0.5A	
Input AC frequency	50/60Hz	
Output voltage and current	12V === 1A, 12W	
Average efficiency	83.02%	
Low load efficiency (10%)	80.59%	
No-load power consumption	0.065	

## DEVICE DESCRIPTION

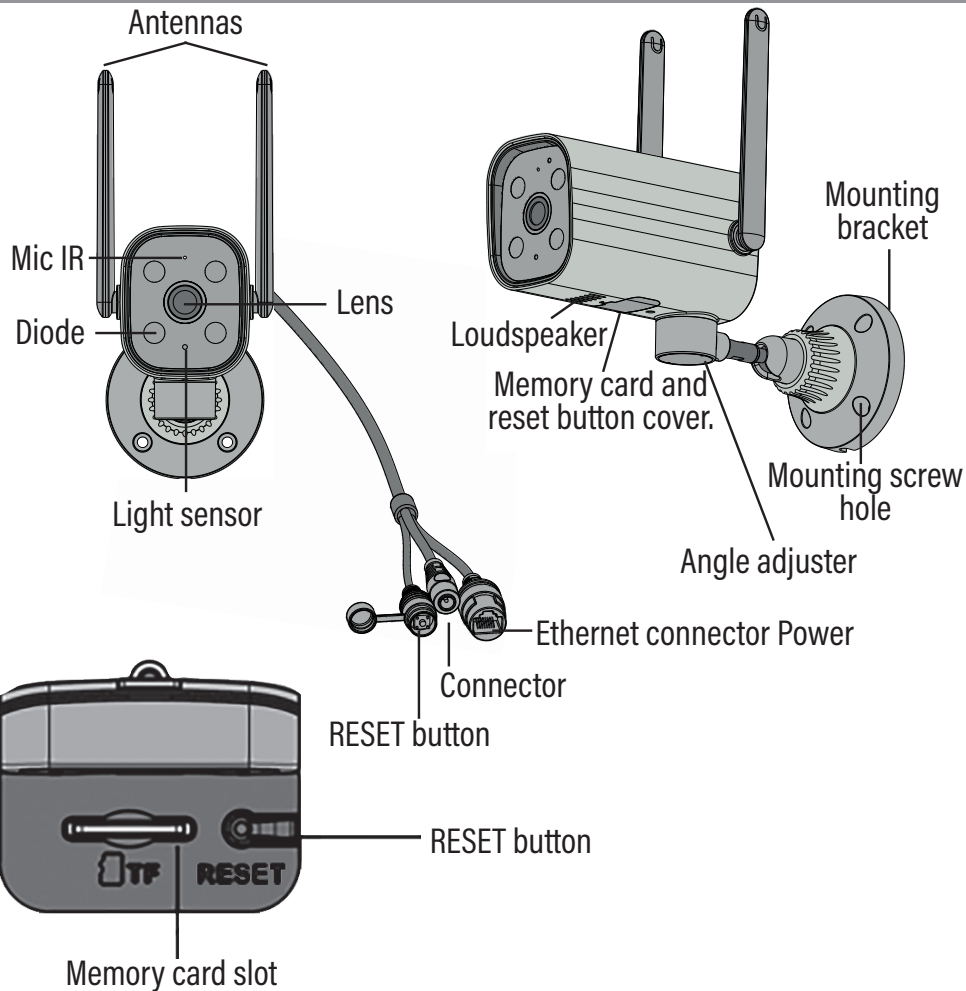


## WALL INSTALLATION

The bracket with the camera can be fixed on the concrete wall with use of rawlplugs.

1. Place the bracket against the wall and mark the locations of the holes to be drilled. You can also use the auxiliary template from the equipment.
2. Drill holes matching the diameter of the mounting plug, put the plugs in the holes.
3. Place the mounting bracket against the wall, insert the screws into the bracket holes and screw into the plugs, securing the bracket to the wall.


**ATTENTION! IF THE BRACKET IS NOT SECURELY FIXED, REMOVE IT AND RE-INSTALL IN ACCORDANCE WITH THE INSTALLATION INSTRUCTIONS.**

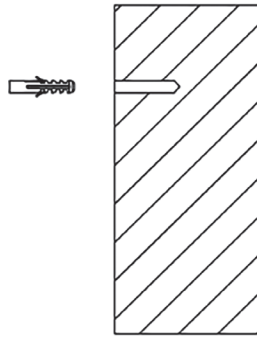

**CAUTION! WE RECOMEND TO INSTALL THE CAMERA UNDER A ROOF AND AVOID SUNNY SPOTS.**

## INSTALLATION OF THE ETHERNET CABLE WITH INSULATION

1. Put the rubber cover on the Ethernet plug.



2. Route the Ethernet cable through the components in the following order:



3. Twist and connect the elements together:



4. Insert the A plug into the camera's Ethernet socket, rotate the mounting nut to attach it to the waterproof housing.


5. To connect the camera to the local Internet network, first configure the camera according to the „Installation and operation of the application” section, then connect the LAN cable plug to the Ethernet input on the camera.

**ATTENTION! REQUIRES A NETWORK CONNECTION WITHIN THE SAME ROUTER.**

## POWER OVER ETHERNET CABLE (POE)

To power the camera with a network cable, use the supplied adapters (PoE).

1. Connect the output adapter to the Ethernet input and the power input of the camera.
2. Connect the power adapter plug and the LAN connector to the input adapter.
3. Connect both adapters with an Ethernet cable with RJ45 connectors.

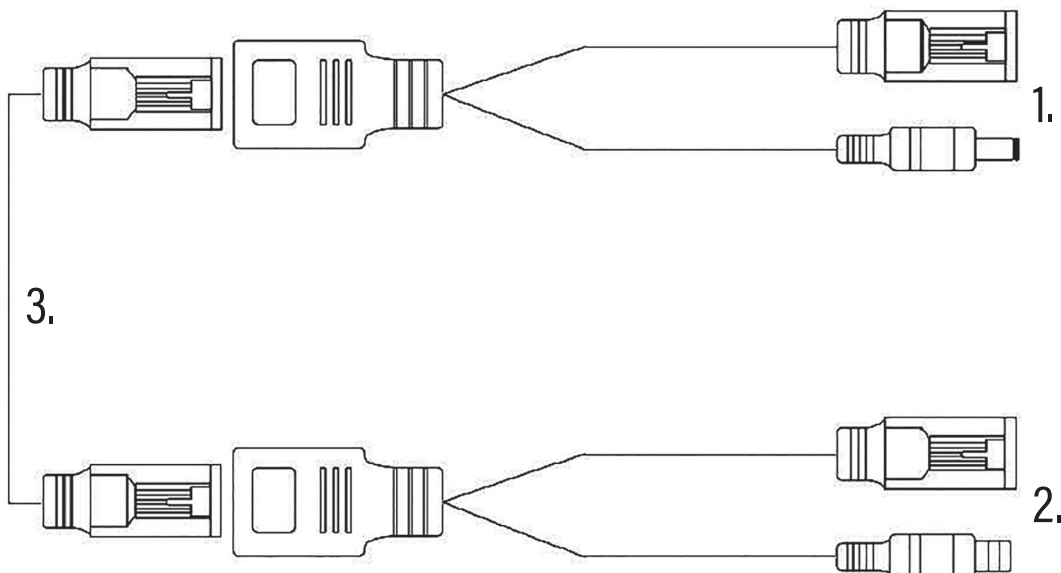

## INSTALLING THE MEMORY CARD

To install a microSD memory card (max. 128 GB):

1. Gently lift the cover of the memory card slot and open it.
2. Slide the card into the slot as marked, press and lock.

## INSTALLATION AND OPERATION OF THE APPLICATION

1. Download the Setti+ app from the website by scanning the QR code below:



w aplikacji Google Play  
wyszukaj Setti+



w aplikacji App Store  
wyszukaj Setti+.

2. Open the installed application.
3. As a new user, create a new account. Once you have an account, log in using your own access data.
4. Start the device by connecting the power adapter to the electrical outlet, and the cable plug to the power input in the camera. The camera will perform a test movement and emit audible signals.
5. Open the slot cover, press and hold the reset button for 5 seconds. The camera will emit an audible signal and enter the configuration mode.
6. In the upper right corner of the application, press the „+” button and select the appropriate device: Security, SC930 Camera.
7. Make sure that the camera is plugged into the power supply and makes audible signals, informing about the configuration mode.

8. Select the Wi-Fi network (2.4GHz), enter the password and confirm it with the „Next” button.
9. A QR code will be displayed on the phone screen. Point the camera lens towards the phone screen to scan the code. After hearing a beep, confirm with the button “I heard a sound.
10. After successfully connecting the device, you can fully enjoy its remote operation.
11. To connect the camera to the local network, connect the LAN cable plug to the Ethernet port on the camera.

**ATTENTION! A NETWORK CONNECTION IS REQUIRED WITHIN THE SAME ROUTER WITH WHICH CONFIGURATION WITH THE CONTROL APPLICATION WAS MADE.**

A detailed operating manual for the control application is available at:

<https://setti.pl/wsparcie/aplikacja>

or after scanning this QR code:



## CLEANING

The appliance should be inspected and cleaned regularly.

1. If the device works surrounded by high vegetation, it should be cleaned of possible dust and dirt.
2. Use a softly damp cloth for cleaning.

**CAUTION! DO NOT USE CHEMICALS OR ABRASIVES FOR CLEANING.**

## STORAGE

1. Disconnect the power supply from the power socket if the appliance is not in use.
2. Store the appliance in a dry, safe place away from children.

## TROUBLESHOOTING

PROBLEM	POSSIBLE CAUSE	SOLUTION
An acoustic signal was triggered.	The camera has not been properly configured with the network or has been disconnected.	Set up the home network station according to section "Installation and operation of the application".



<b>PROBLEM</b>	<b>POSSIBLE CAUSE</b>	<b>SOLUTION</b>
It is not possible to setup Wi-Fi network in camera.	The router operates at 5GHz.	Change the router operating frequency from 5GHz to 2.4GHz. The names of the 2.4GHz and 5GHz networks should be different.
	There was a problem with Wi-Fi connection.	Check that the Wi-Fi signal of the router is of correct strength.
The camera does not respond to changes in the application.	There was a problem with Wi-Fi connection.	Check that the Wi-Fi signal of the router is of correct strength.
	The camera is too far away from the Wi-Fi signal source.	Boost the Wi-Fi signal of the router or reduce the distance between the camera and the router.
	The router configuration has been changed.	Re-configure the camera with the home network, according to the "Installation and operation of the application" section.

## **DECLARATION**

ART-DOM Sp. z o.o. hereby declares that the SC930 camera complies with the relevant requirements of the Union harmonisation legislation: Directive 2014/53/EU and other Union harmonisation legislation. The full text of the EU declaration of conformity is available at the following address: [www.artdom.net.pl/deklaracja/SC930/](http://www.artdom.net.pl/deklaracja/SC930/)

## **ECO-FRIENDLY AND ENVIRONMENTALLY FRIENDLY DISPOSAL**

This device is marked, in accordance with Directive 2012/19/EU of the European Parliament and of the Council of 4 July 2012 on waste electrical and electronic equipment (WEEE), with the symbol of a crossed-out waste container:



Do not dispose of the device marked with this symbol together with household waste.

For disposal return the device to your local waste treatment and disposal facility or contact your local authorities.

### **YOU CAN HELP PROTECT THE ENVIRONMENT!**

Proper handling of waste electrical and electronic equipment contributes to avoiding harmful consequences for human health and the environment resulting from the presence of hazardous components and improper storage and processing of such equipment.

## **WARRANTY CONDITIONS FOR THE EXTERNAL CAMERA**

1. ART-DOM Sp. z o.o. with its registered office in Łódź (92-402) at ul. Zakładowa 90/92 National Court Register Number 0000354059 (Guarantor) guarantees that the purchased device is free from physical defects. The warranty covers only defects resulting from the causes inherent in the item sold (manufacturing defects).
2. A disclosed defect will be removed at the Guarantor's expense within 14 days from the date of reporting the damage to the authorized service or point of sale.
3. In exceptional cases, e.g. the need to import spare parts from their manufacturer, the repair period may be extended up to 30 days.
4. The warranty period for the user is 24 months from the date of delivery of the goods.
5. The goods are intended for use only in the conditions of an individual household.

6. The present warranty does not cover:
  - a. damage caused by using the device in a manner inconsistent with the user manual,
  - b. mechanical, chemical or thermal damage,
  - c. repairs and modifications made by companies or persons that were not authorized to do so by the manufacturer,
  - d. parts that are easily worn or consumables such as: batteries, bulbs, fuses, filters, knobs, shelves, accessories,
  - e. installation, maintenance, inspection, cleaning, unlocking, removal of contaminants and instruction.
7. The Guarantor will select the mode of defect removal at its own discretion. Removal of a confirmed defect of the device will take place through warranty repair or replacement of the device. The Guarantor may perform repairs when the Buyer requests replacement or the Guarantor may perform replacements when the Buyer requests repair, if bringing the goods (device) into conformity in accordance with the granted warranty in the manner selected by the buyer proves impossible or would require excessive costs at the part of Guarantor. In particularly justified cases, if both repair and replacement are impossible or would require excessive costs for the Guarantor, the Guarantor may refuse to bring the goods into compliance with the granted warranty and propose another way to settle the warranty claim.
8. The exchange of goods is made at the point of sale at which the goods were purchased (replacement or refund) or an authorized service point, if it offers such service (replacement). The returned device must be complete, without mechanical damage. Failure to comply with these conditions may result in failure to accept the warranty claim.
9. In the event of non-compliance of the goods with the sales contract, the buyer is entitled by law to legal protection measures on the part and at the expense of the seller, and the warranty does not affect these legal protection measures.

10. The warranty is valid in Poland.
11. The condition for the warranty repair or replacement of the device is the presentation of proof of purchase and the use of the goods in accordance with the information contained in the user manual.

## **CAUTION!**

Damage or removal of the rating plate from the device may result in warranty being deemed void.

We are constantly improving our products, so they may differ slightly from the images presented on the packaging and in the user manual. Please read the user manual before operating the appliance.

**ART-DOM Sp. z o.o., ul. Zakładowa 90/92, 92-402 Łódź. National Court Register number 0000354059.**



v. 2