




ULTRADESK®

FRAG

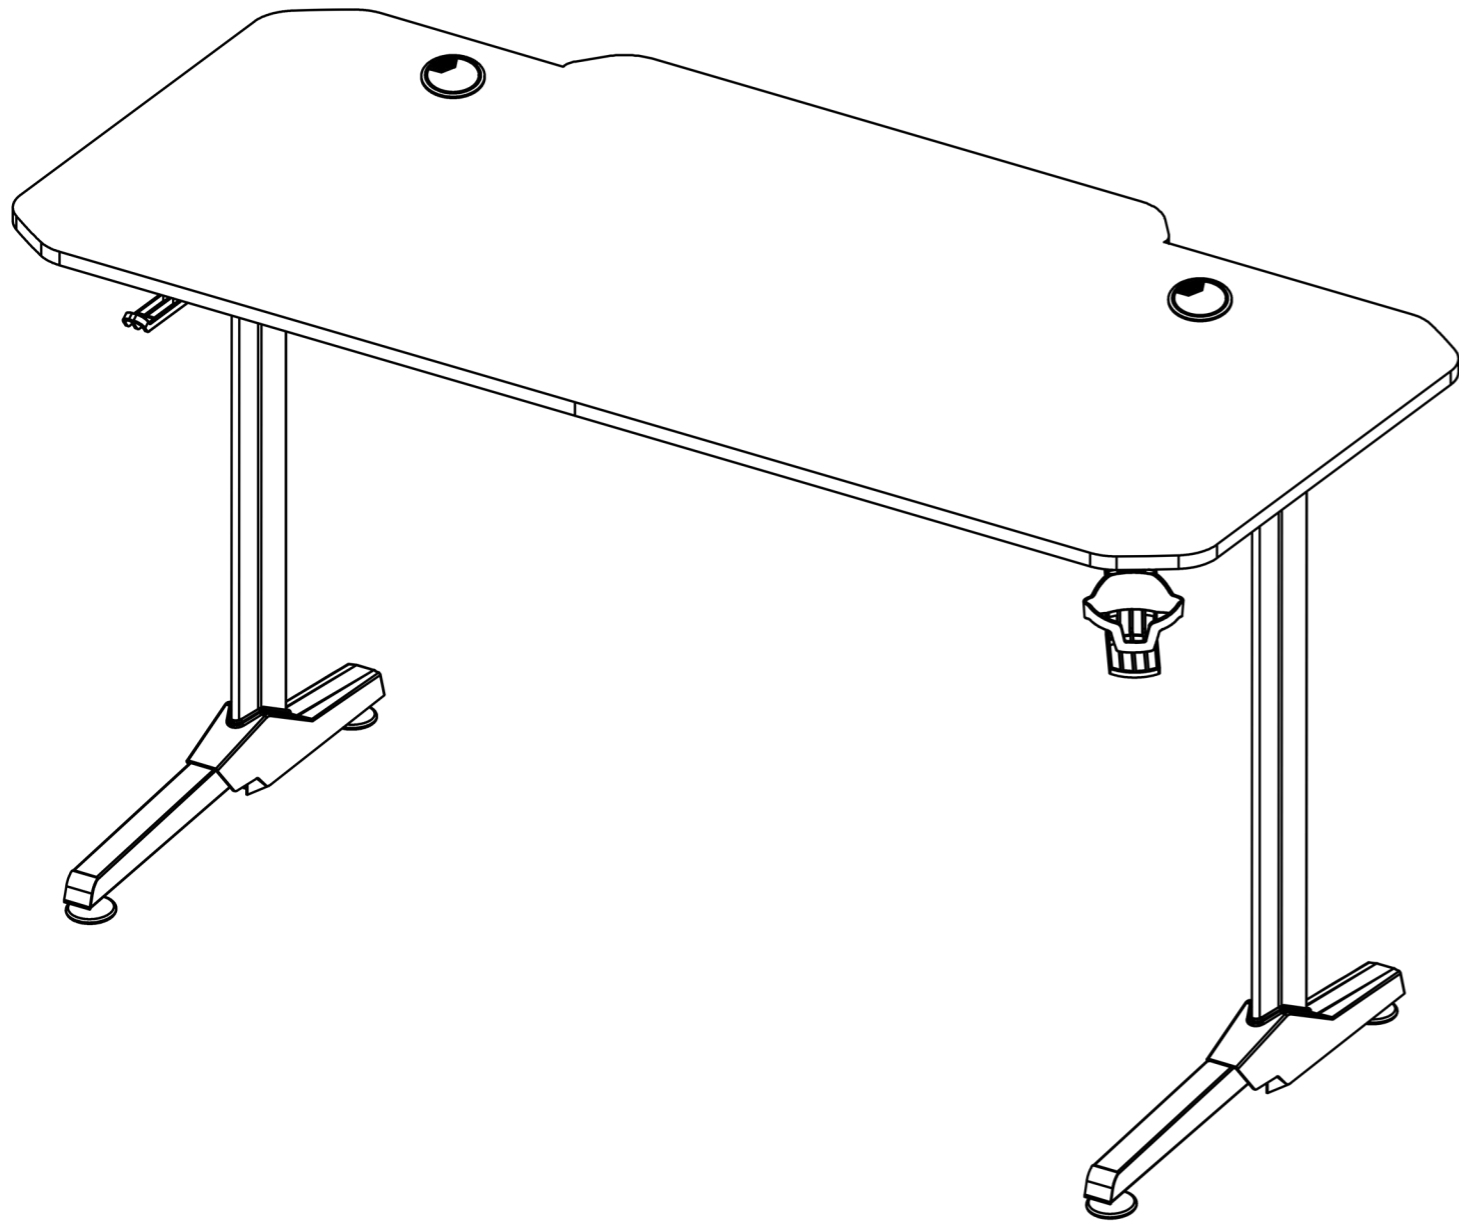

N*4



O*1



P*2



M10*20
S1*6




M8*16
S2*10




M4*14
S3*36




6mm
R*1

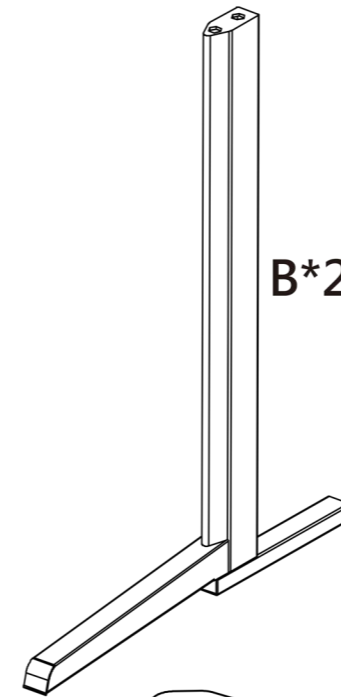


B*2

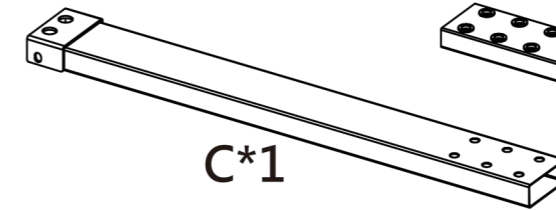


C*1

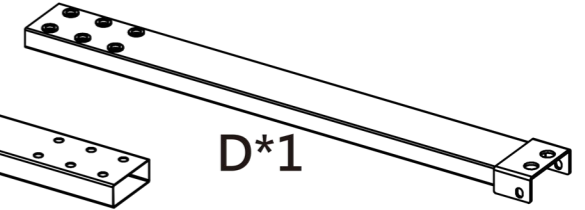


D*1

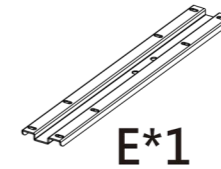

E*1

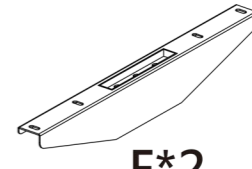


F*2




T*2




G*1

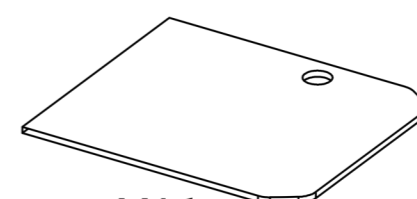


H*1

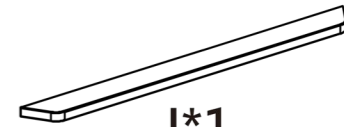


I*1

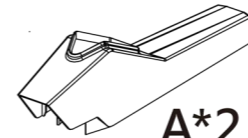


A*2

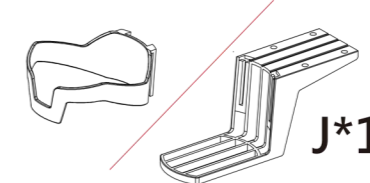

J*1

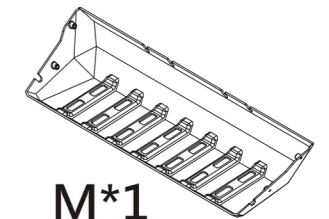


M*1

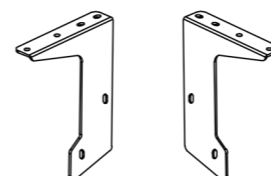


L1



L2



K*1

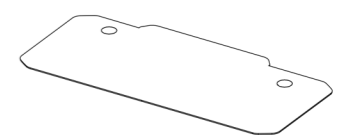

Q*1

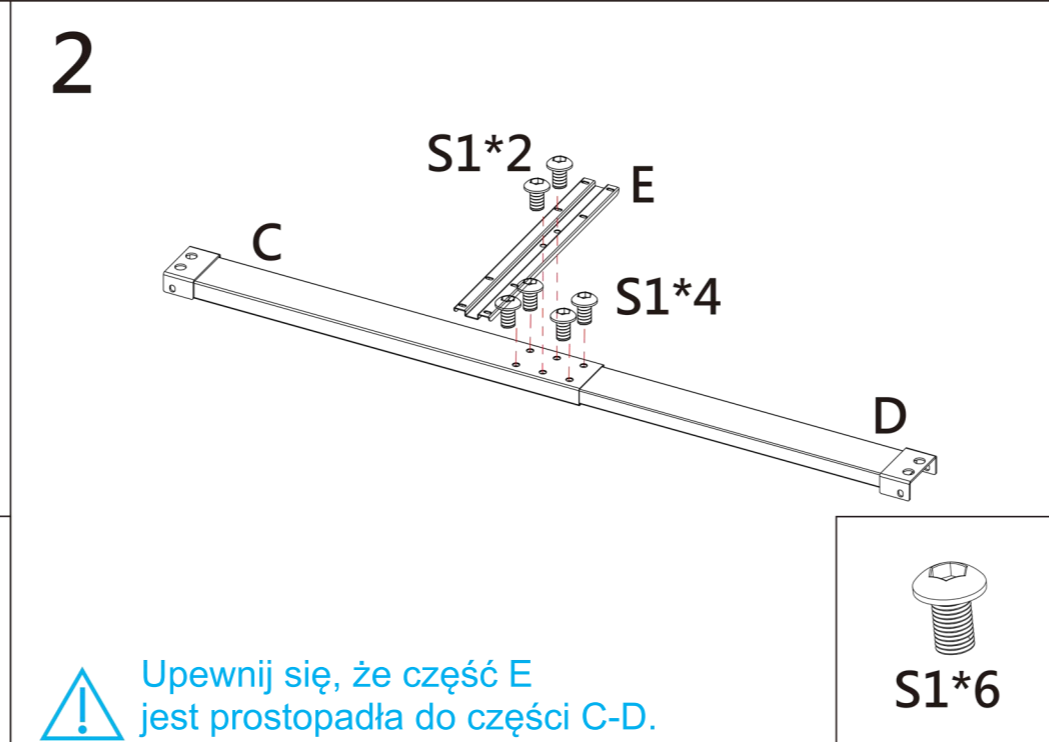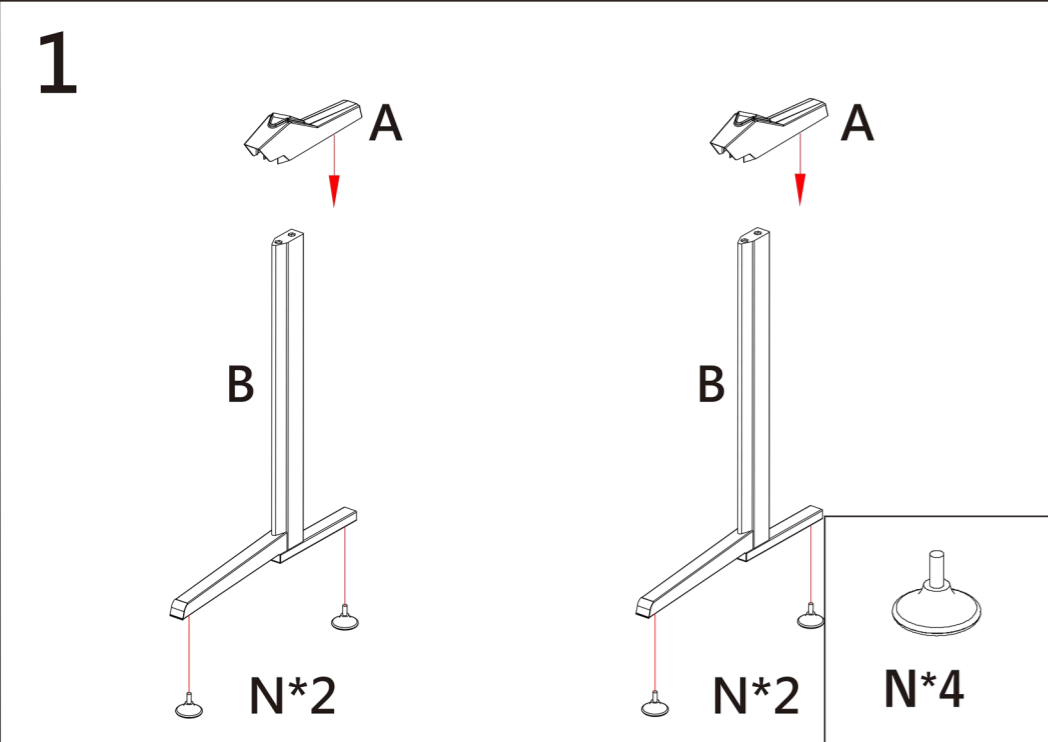

⚠ Upewnij się, że część E jest prostopadła do części C-D.

